
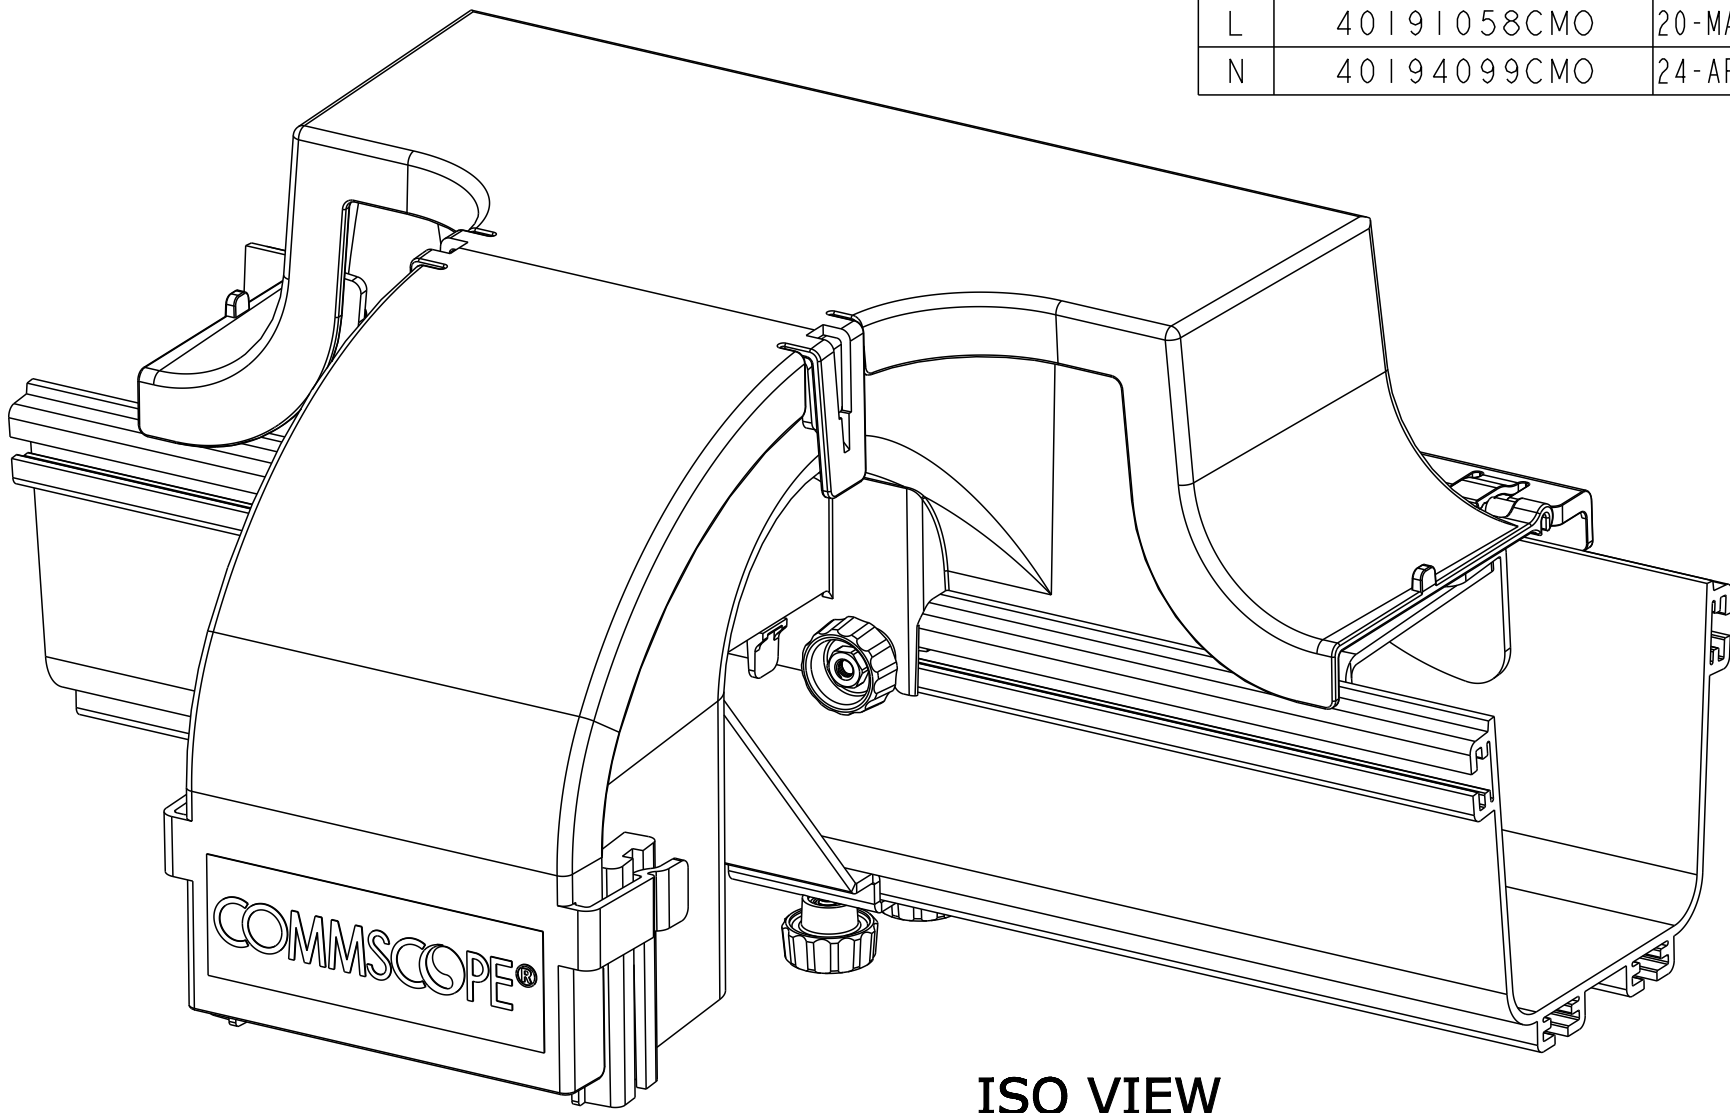



REVISIONS			
REV	CMO	DATE	APPROVED
L	40191058CMO	20-MAR-2024	GVR
N	40194099CMO	24-APR-2024	GVR

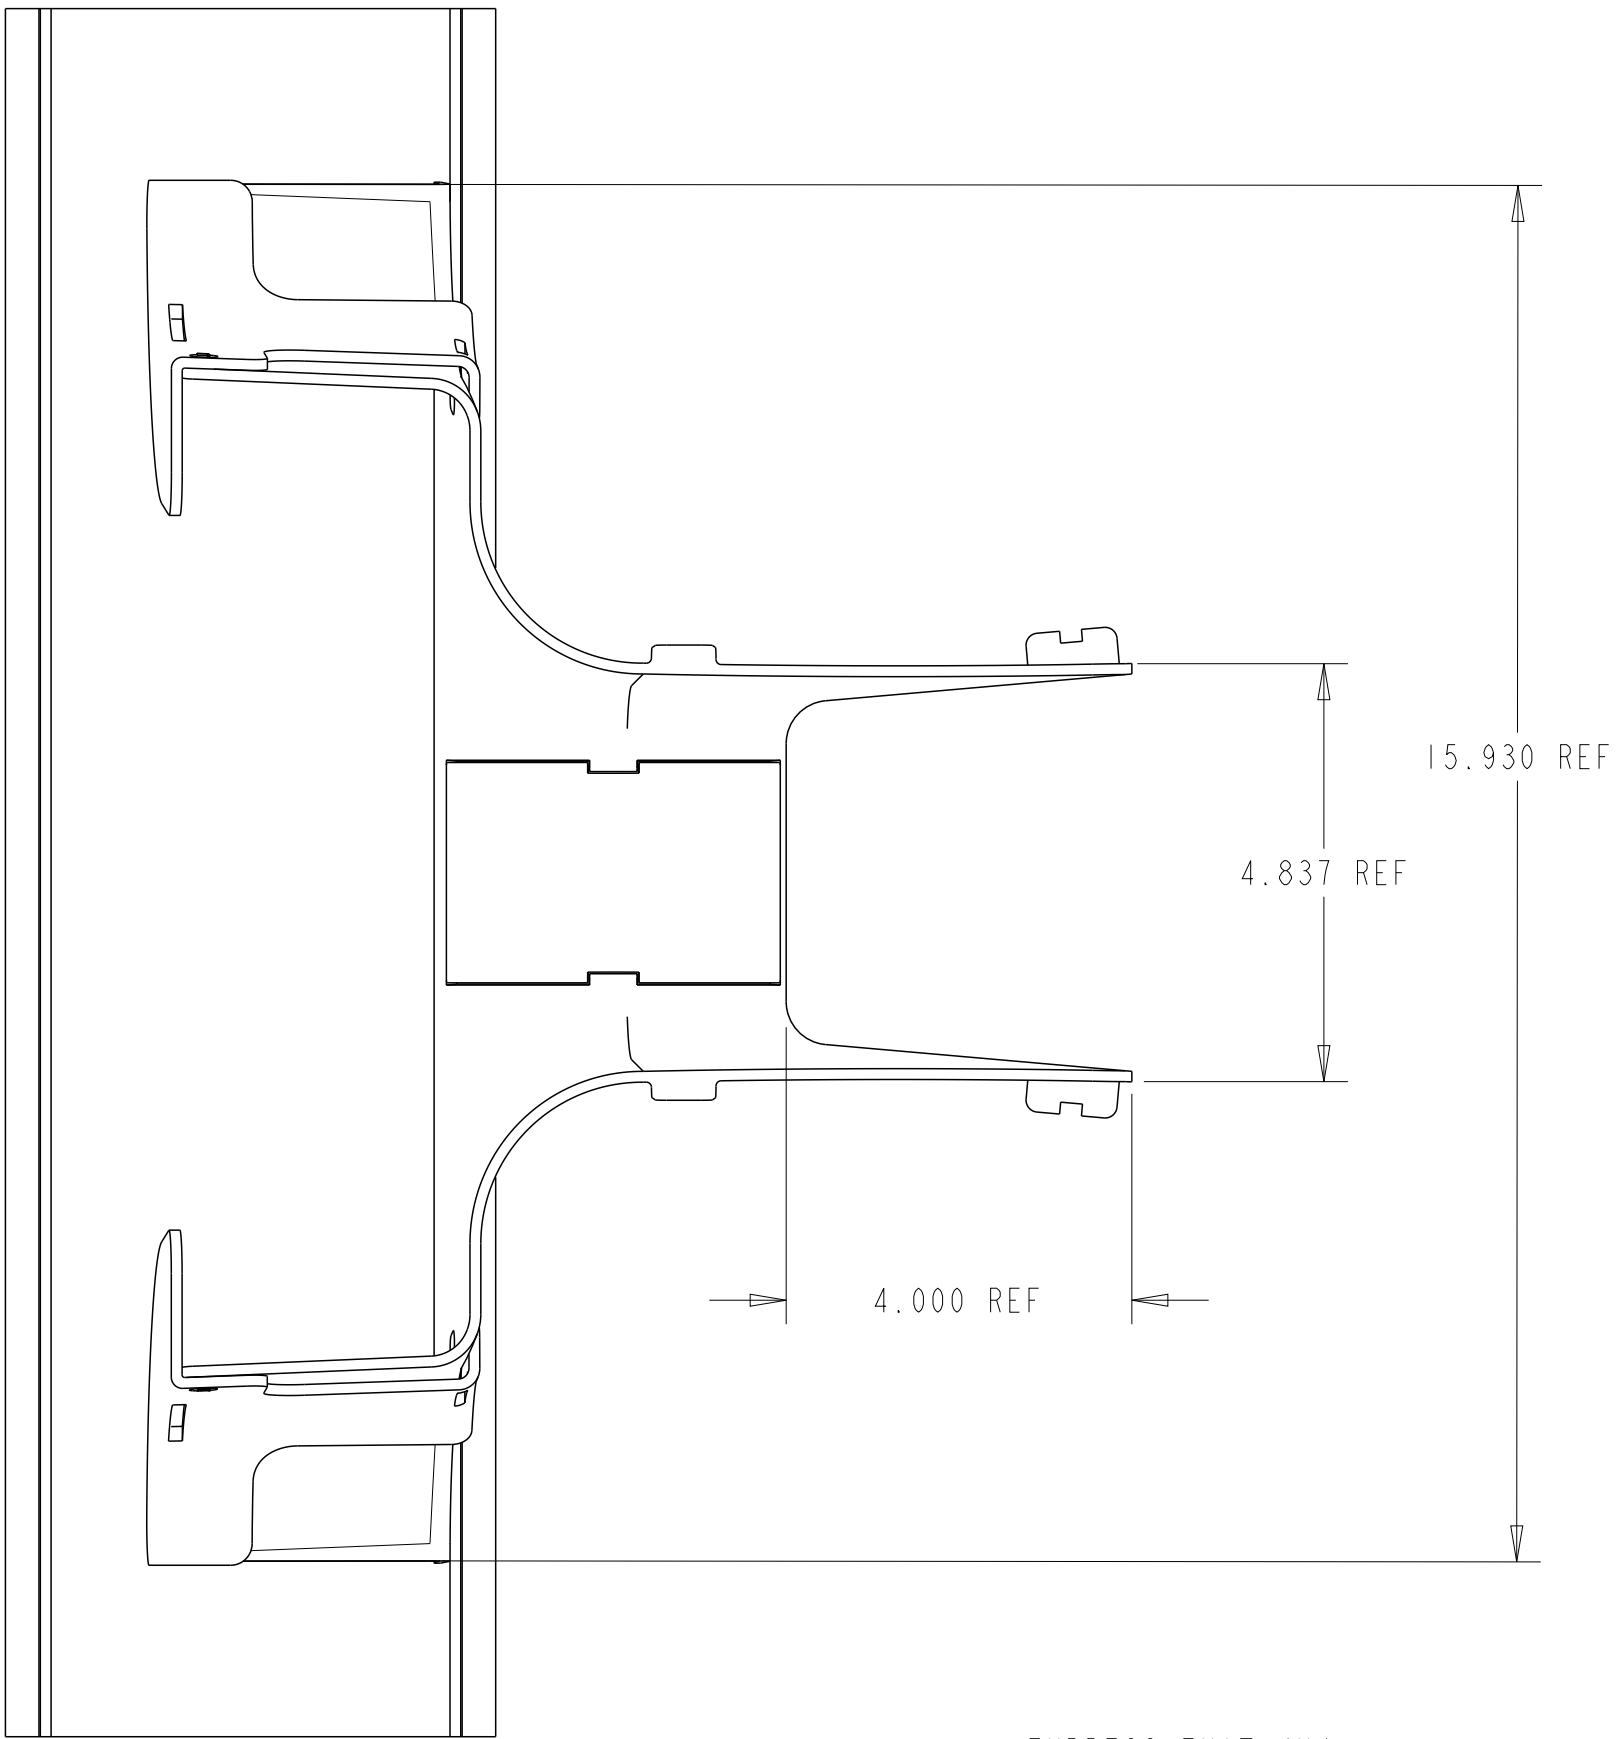

ISO VIEW
SCALE 0.450

I COVER, EXPRESS EXIT 4X4

COVER EXTENSION
4X4 FLIP COVER
FGS-MEXC-E-A
(NOT INCLUDED IN KIT)

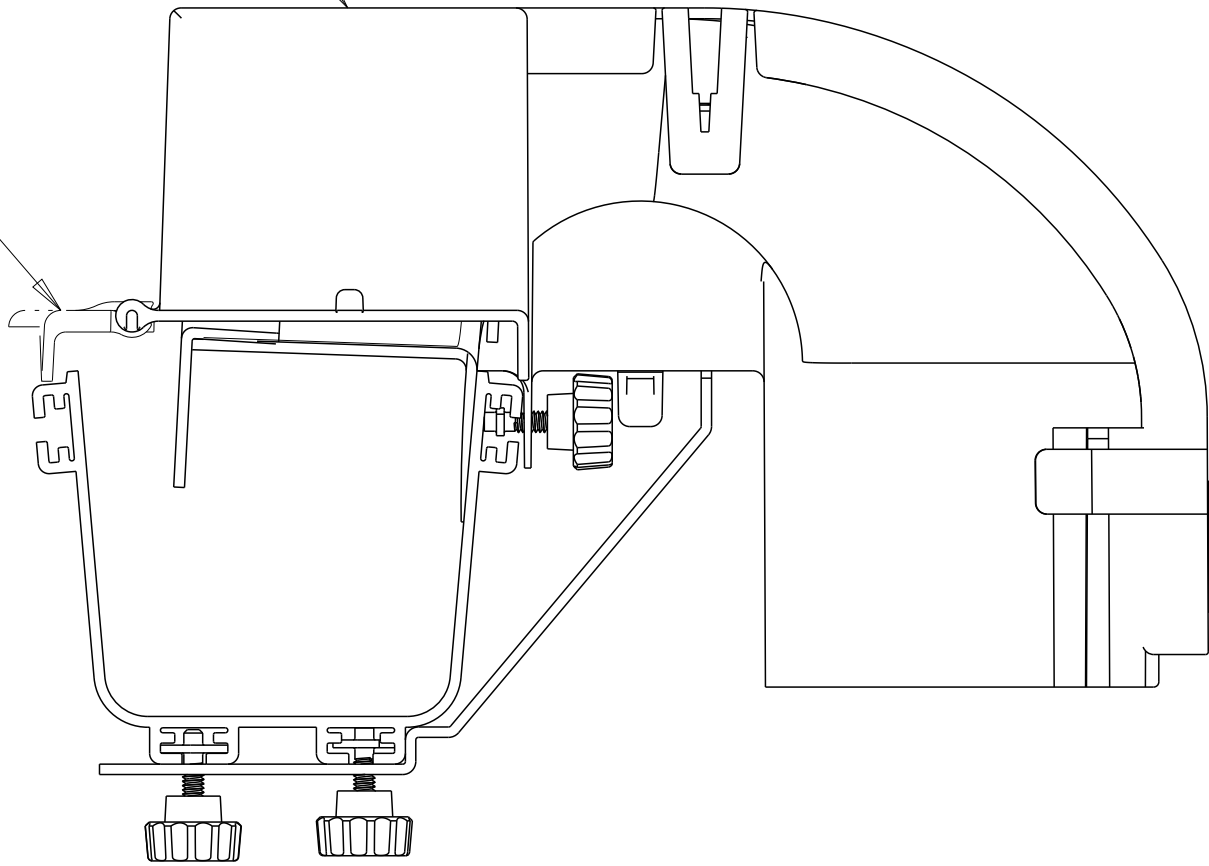


FLIP COVER OPEN VIEW
SCALE 0.450

FGSB-MEXP-E-ABF-NC	BLACK
FGS-MEXP-E-ABF-NC	YELLOW
FGSB-MEXP-E-A/B/F	BLACK
FGS-MEXP-E-A/B/F	YELLOW
CATALOG NO.	COLOR

I

I

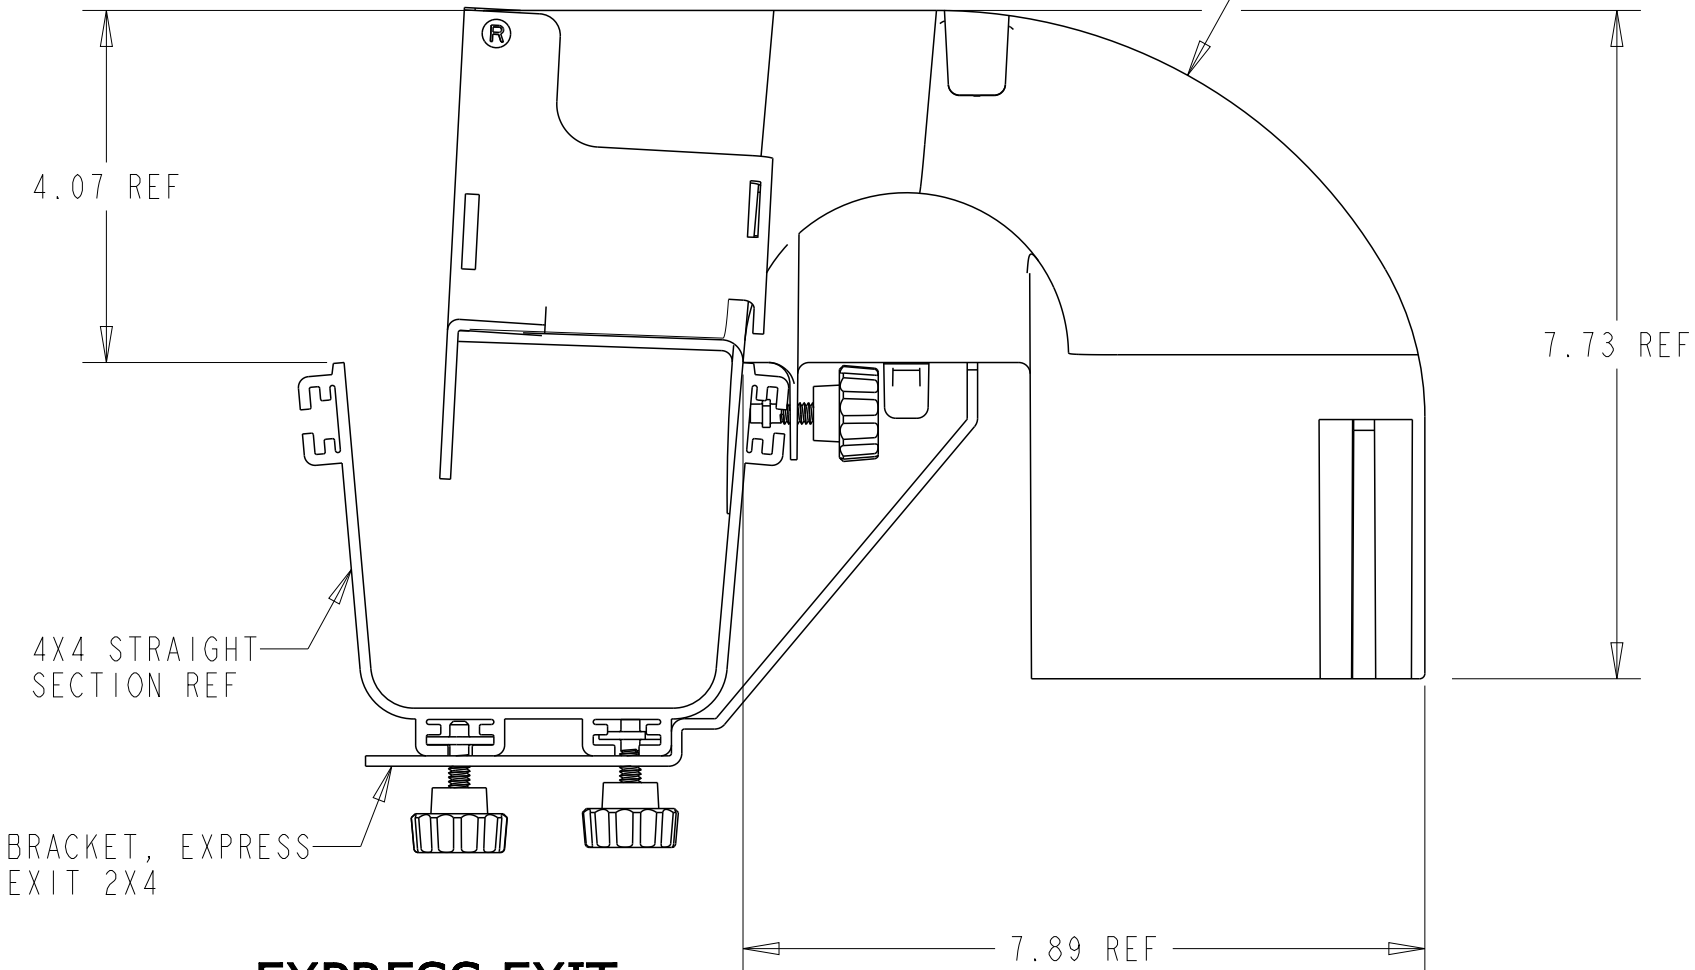


EXPRESS EXIT
ON TROUGH VIEW
SCALE 0.450

4X4 STRAIGHT
SECTION REF

BRACKET, EXPRESS
EXIT 2X4

EXPRESS EXIT 4X4


COMMSCOPE, INC.				
DRAFTER GILBERTO VILLA	TITLE KIT, BRACKET, RESTRAINING, L/R, FGS			
ENGINEER RUBEN ARVILLA	SIZE A2	SCALE 1.000	DOCUMENT NO. 1147583_ADC	
CUSTOMER DRAWING			REVISION N	SHEET 1 OF 4



CUSTOMER DRAWING

REVISION
N

SHEET
1 OF 4

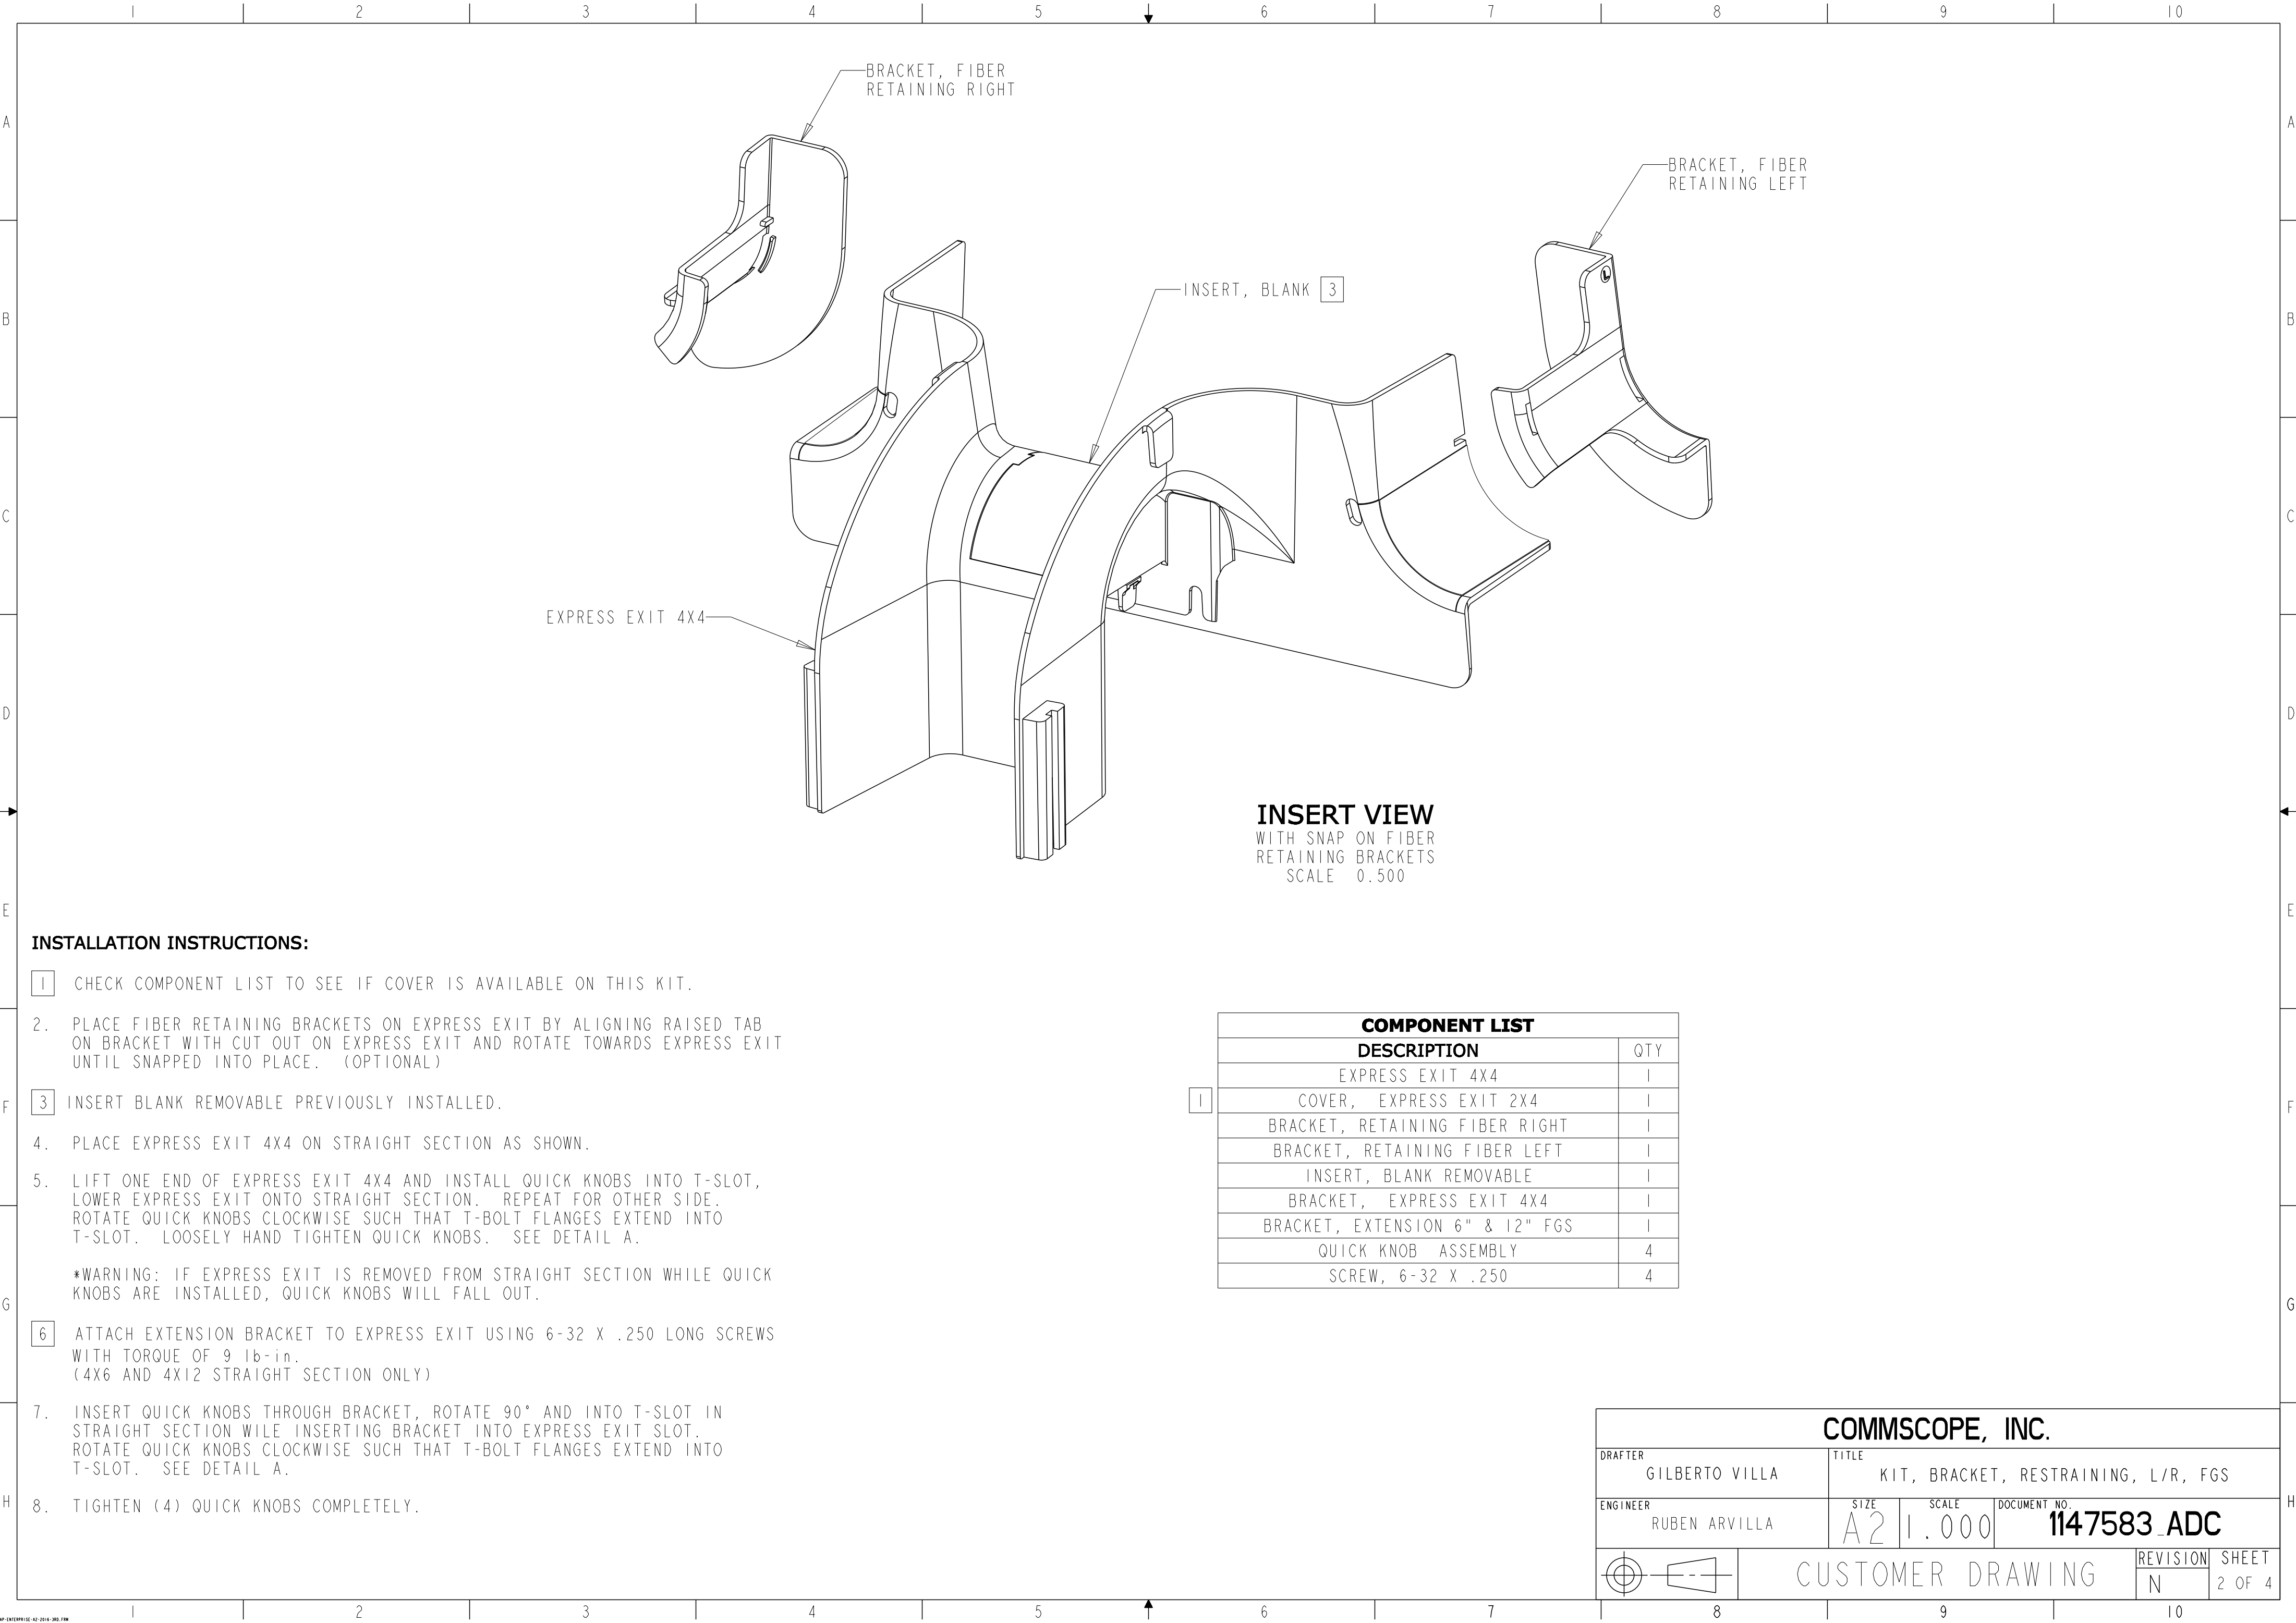


INSTALLATION INSTRUCTIONS:


- 1
- CHECK COMPONENT LIST TO SEE IF COVER IS AVAILABLE ON THIS KIT.
2.
- PLACE FIBER RETAINING BRACKETS ON EXPRESS EXIT BY ALIGNING RAISED TAB ON BRACKET WITH CUT OUT ON EXPRESS EXIT AND ROTATE TOWARDS EXPRESS EXIT UNTIL SNAPPED INTO PLACE. (OPTIONAL)
- 3
- INSERT BLANK REMOVABLE PREVIOUSLY INSTALLED.
4.
- PLACE EXPRESS EXIT 4X4 ON STRAIGHT SECTION AS SHOWN.
5.
- LIFT ONE END OF EXPRESS EXIT 4X4 AND INSTALL QUICK KNOBS INTO T-SLOT, LOWER EXPRESS EXIT ONTO STRAIGHT SECTION. REPEAT FOR OTHER SIDE. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. LOOSELY HAND TIGHTEN QUICK KNOBS. SEE DETAIL A.
- *WARNING: IF EXPRESS EXIT IS REMOVED FROM STRAIGHT SECTION WHILE QUICK KNOBS ARE INSTALLED, QUICK KNOBS WILL FALL OUT.
- 6
- ATTACH EXTENSION BRACKET TO EXPRESS EXIT USING 6-32 X .250 LONG SCREWS WITH TORQUE OF 9 lb-in. (4X6 AND 4X12 STRAIGHT SECTION ONLY)
7.
- INSERT QUICK KNOBS THROUGH BRACKET, ROTATE 90° AND INTO T-SLOT IN STRAIGHT SECTION WILE INSERTING BRACKET INTO EXPRESS EXIT SLOT. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. SEE DETAIL A.
- H
8.
- TIGHTEN (4) QUICK KNOBS COMPLETELY.

COMPONENT LIST		
DESCRIPTION		QTY
EXPRESS EXIT 4X4		1
COVER, EXPRESS EXIT 2X4		1
BRACKET, RETAINING FIBER RIGHT		1
BRACKET, RETAINING FIBER LEFT		1
INSERT, BLANK REMOVABLE		1
BRACKET, EXPRESS EXIT 4X4		1
BRACKET, EXTENSION 6" & 12" FGS		1
QUICK KNOB ASSEMBLY		4
SCREW, 6-32 X .250		4


COMMSCOPE, INC.				
DRAFTER GILBERTO VILLA		TITLE KIT, BRACKET, RESTRAINING, L/R, FGS		
ENGINEER RUBEN ARVILLA		SIZE A2	SCALE 1.000	DOCUMENT NO. 1147583_ADC
		CUSTOMER DRAWING		REVISION N
				SHEET 2 OF 4

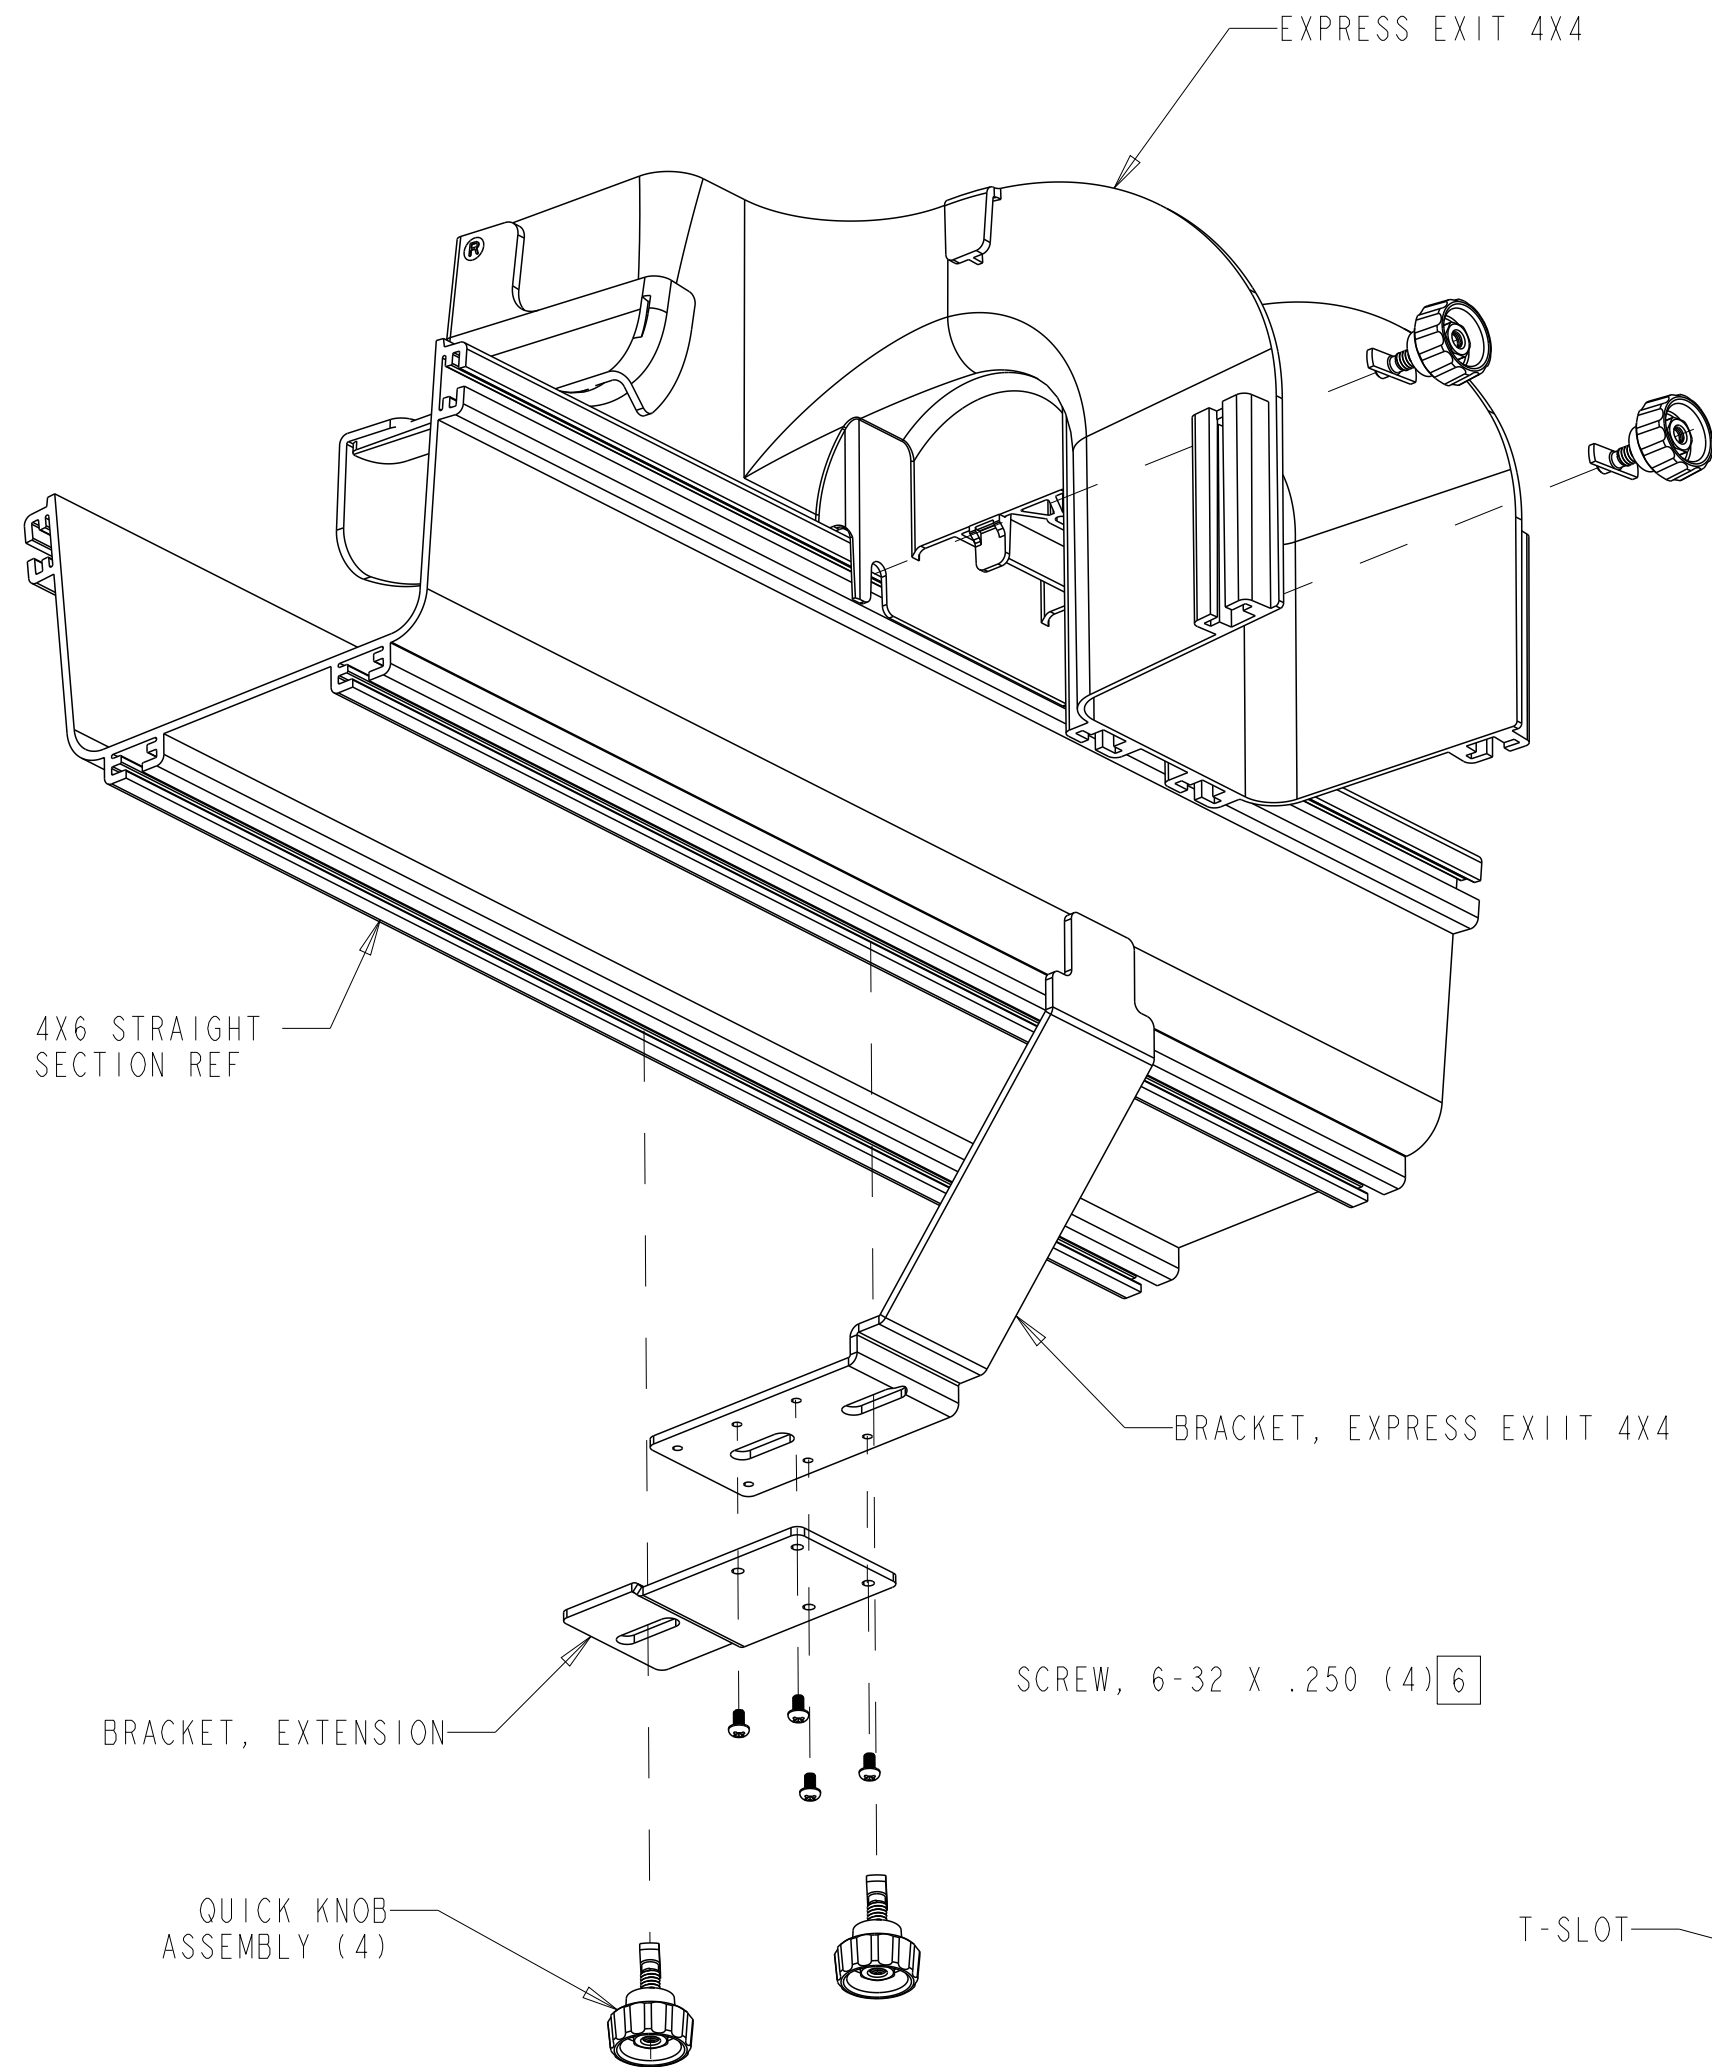


**EXPRESS EXIT 4X4
INSTALLATION**
4X6 STRAIGHT SECTION
SCALE 0.400

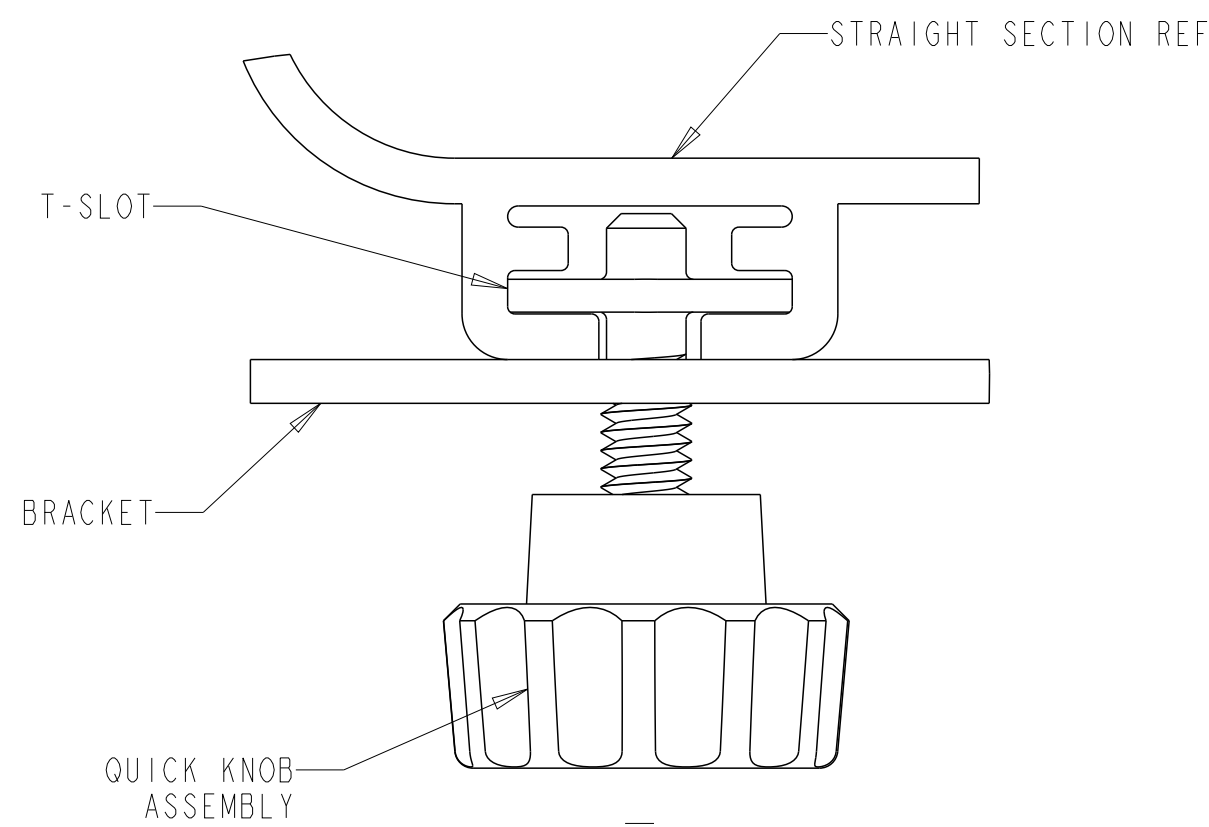


**QUICK KNOB
INSTALLATION VIEW**
SCALE 1.900

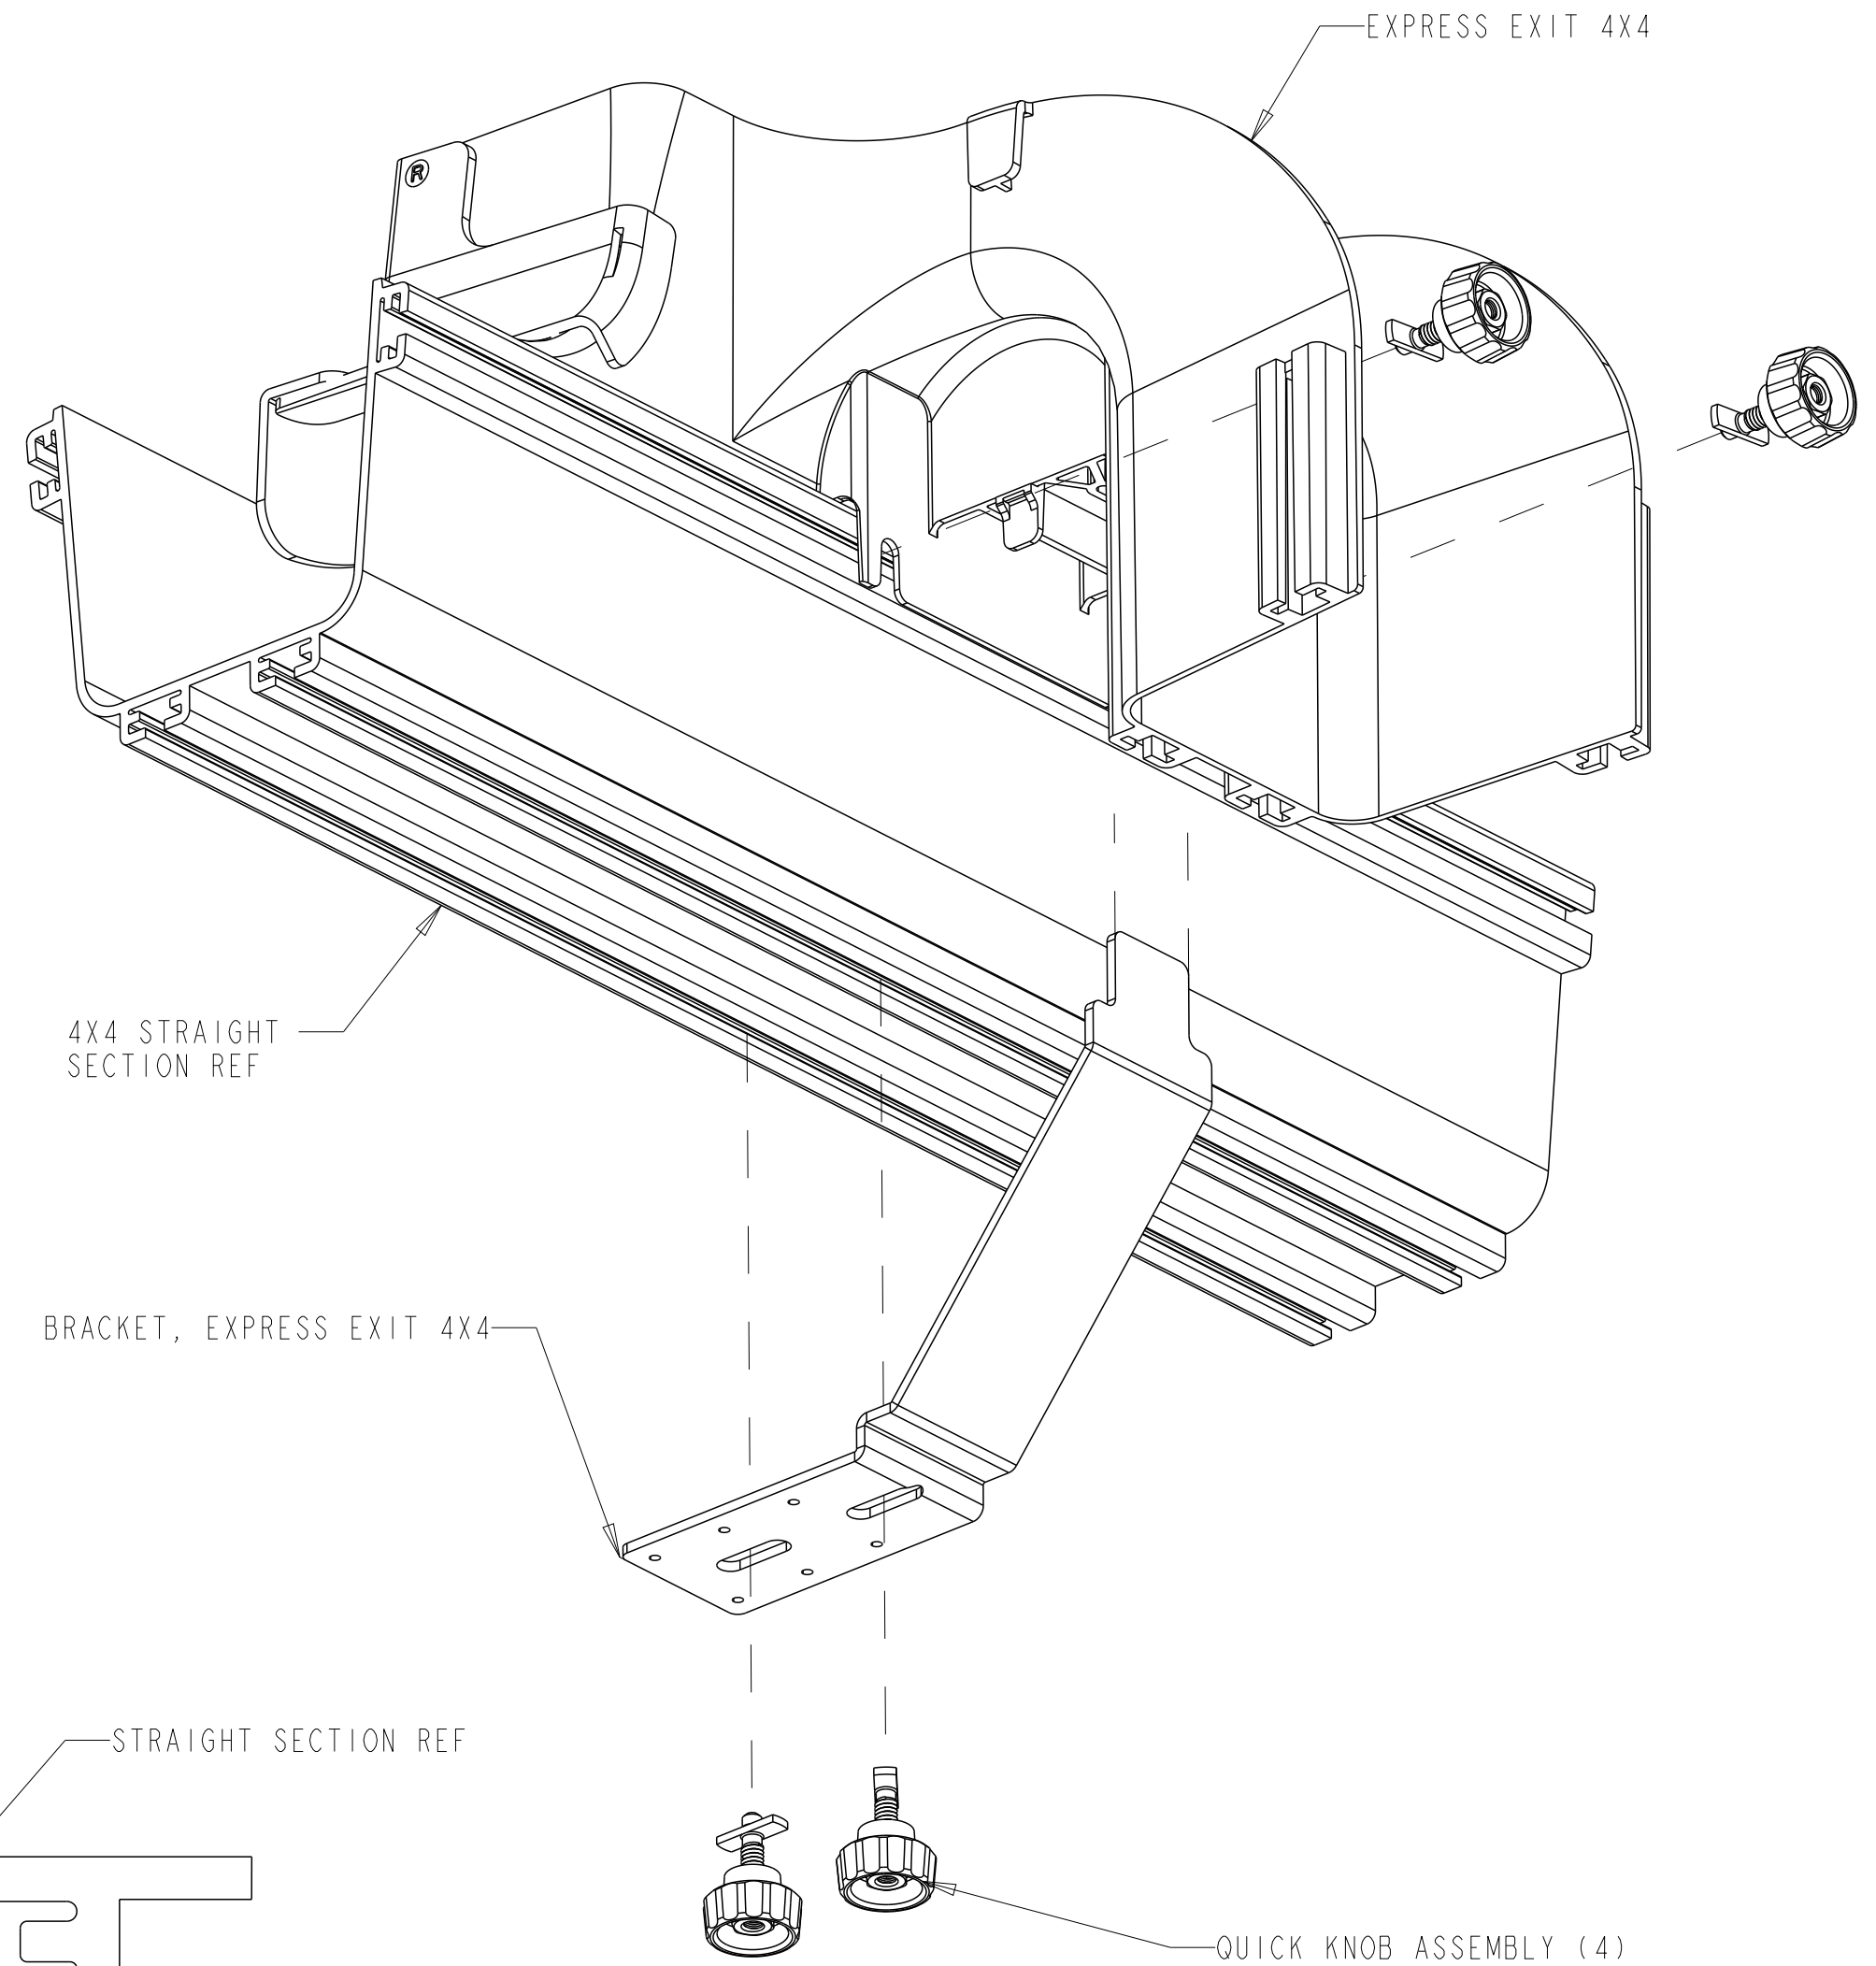

**EXPRESS EXIT 4X4
INSTALLATION**
4X4 STRAIGHT SECTION
SCALE 0.500

COMMSCOPE, INC.					
DRAFTER GILBERTO VILLA		TITLE KIT, BRACKET, RESTRAINING, L/R, FGS			
ENGINEER RUBEN ARVILLA		SIZE A2	SCALE 1.000	DOCUMENT NO. 1147583 ADC	
		CUSTOMER DRAWING			REVISION N
					SHEET 3 OF 4

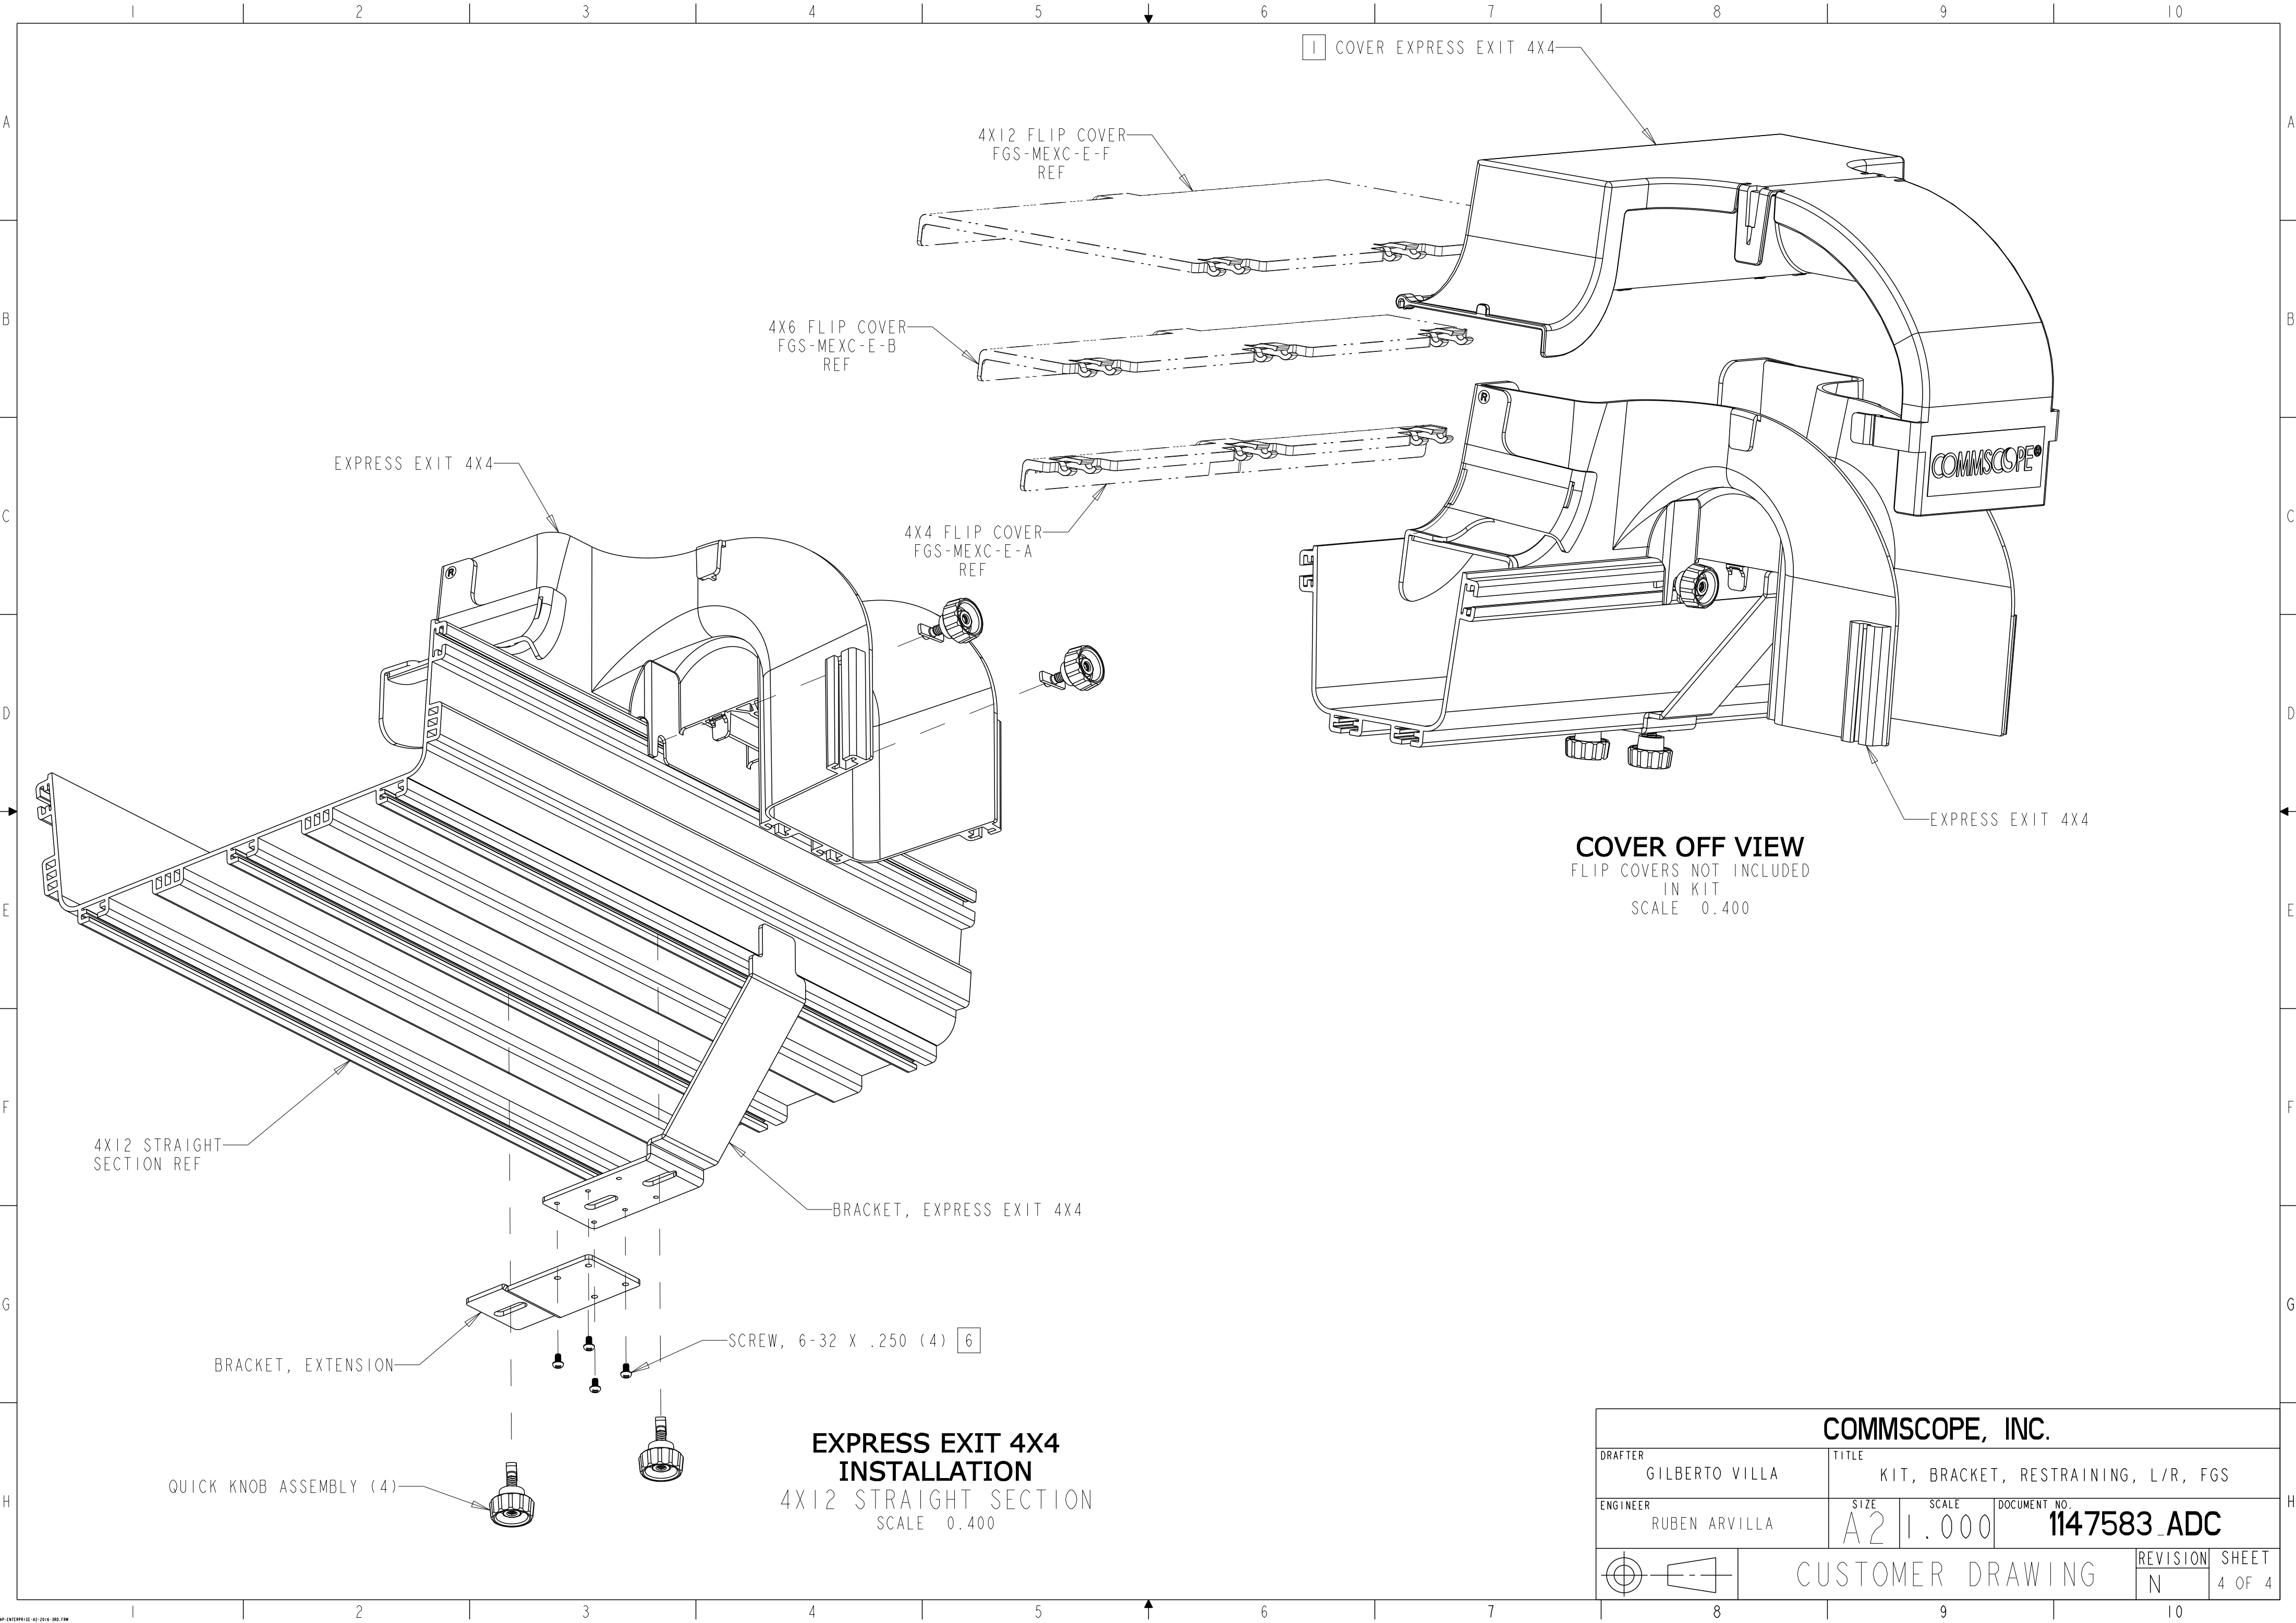

COVER OFF VIEW
FLIP COVERS NOT INCLUDED
IN KIT
SCALE 0.400

**EXPRESS EXIT 4X4
INSTALLATION**
4X12 STRAIGHT SECTION
SCALE 0.400

COMMSCOPE, INC.				
DRAFTER GILBERTO VILLA		TITLE KIT, BRACKET, RESTRAINING, L/R, FGS		
ENGINEER RUBEN ARVILLA		SIZE A2	SCALE 1.000	DOCUMENT NO. 1147583_ADC
		CUSTOMER DRAWING		REVISION N
				SHEET 4 OF 4